


DESCRIPTION OF DEVICE

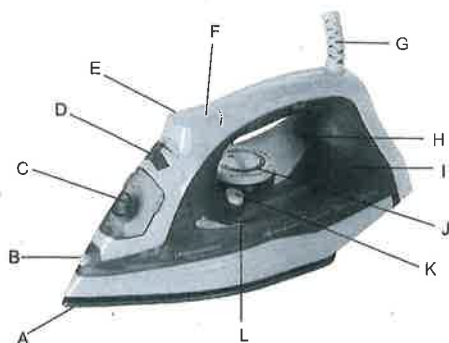

- | | |
|-------------------------------|------------------------------------|
| A. Soleplate with steam vents | B. Spray nozzle |
| C. Filler cap | D. Steam volume regulator |
| E. Spray button | F. Burst button |
| G. Slewing | H. Power light/Auto shut off light |
| I. Transparent watertank | J. Thermostat knob |
| K. Self-clean button | L. Maximum filling level |

GENERAL INSTRUCTIONS

When using the iron for the first time, you may notice a slight emission of smoke and hear some sounds made by the expanding plastic. This is quite normal and it stops after a short time, we also recommend passing the iron over an ordinary cloth before using it for the first time.

PREPARATIONS

Soft the laundry to be ironed according to the international symbols on the garment label, or if this is missing, according to the type of fabric.

SELECTING THE STEAM

The quantity of steam is regulated by the steam knob D.

- Turn the steam knob to a position between minimum and maximum depending on the quantity of steam required and the temperature selected [Fig.5]

Warning: the iron gives off steam continuously only if you hold the iron horizontally, you can stop the

continuous steam by placing the iron in a vertical position or by moving the steam knob to "OFF". As indicated on the steam knob D and in the initial table, you can only use steam at the highest temperatures, if the selected temperature is too low, water may drip into the plate.

SELECTING SHOT-STEAM WHEN IRONING VERTICALLY

Pressing the shot-steam button F to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing against [Fig.4]

By pressing the shot-steam button at intervals you can also iron vertically (curtains, hung garment, etc) [Fig. 6]

Warning: the shot-steam function can only be used at high temperatures, stop the emission when the power light H comes on, then start ironing again only after the light has gone off.

DRY IRONING

To iron without steam, follow the instruction in section "steam ironing". Leaving the steam selector D on position "OFF".


SPRAY FUNCTION

Make sure that there is water in the reservoir; press the spray button E slowly (for a dense spray) or quickly (for a vaporized spray) [Fig.2]

Warning: for delicate fabrics, we recommend moistening the fabric beforehand using the spray function, or putting a damp cloth between the iron and the fabric, to avoid staining, do not use the spray on silk or synthetic.



GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
	synthetic	Low temperature
	Silk-wool	medium temperature
	Cotton-linen	High temperature
	Fabric not to be ironed	

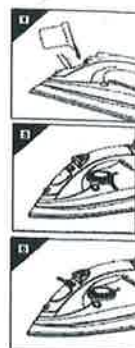

Start ironing the garments requiring a low temperature.

This reduces the waiting times (the iron takes less time to heat up than to cool down) and eliminates the risk of scorching the fabric.

STEAM IRONING

- Filling the reservoir
- Check that the plug is disconnected from the socket
- Move the steam knob D to "OFF" [Fig.5]
- Open the cap C
- Raise the tip of the iron to help the water enter the opening without overflowing [Fig.1]
- Slowly pour the water into the reservoir using the special measure and taking care not to go over the maximum level (about 300ml) indicated by "MAX" on the reservoir
- Close the cap C

SELECTING THE TEMPERATURE

- Put the iron in a vertical position.
- Put the plug in the socket.
- Adjust the temperature knob I according to the international symbol on the garment label [Fig.3]. The power light H indicates that the iron is heating up. Waiting until the power light goes off before ironing.

Warning: During ironing, the power light H comes on at intervals, indicating that the selected temperature is maintained, if you lower the selected temperature after ironing at a high temperature, do not start ironing until the power light comes on again.

AUTOSTOP (Automatic safety shut-off)

If the iron is left motionless for more than 30 seconds, the heating element will be switched off, automatically, to indicate that the iron has shut off, the auto stop pilot light (green) will start blinking and six sound signals will be audible.

In a horizontal position, this will happen after 30 seconds; In a vertical position, this will happen after 8 minutes.

When picking up the iron again, the auto stop Pilot light will go out, the supply pilot light will come on, this indicates that the iron is heating up again.

Wait for the supply pilot light to go out, then you can recommence ironing.

SELF-CLEANING

The self-cleaning feature cleans inside the plate, removing impurities, we recommend using it every 10-15 days directions:

- Filling the reservoir up to the maximum level indicated and set the thermostat to "OFF". Adjust the temperature knob I to the highest temperature and wait for the light H (red) to turn off.
- Pull the plug out of the socket and hold the iron horizontally over the sink.
- Hold the calc-clean button J setting until all the boiling water, steam, impurities come out [Fig 7].
- When the soleplate has cooled down, you can clean it with a damp cloth.



CLEANING

Please note: before cleaning the iron in any way, make sure that the appliance plug is not connected to the socket.

- Any deposits, starch residue or size left on the plate can be removed using a damp cloth or an unabrasive liquid detergent
- Avoid scratching the plate with steel wool or metallic objects
- The plastic parts can be cleaned with a damp cloth then wiped over with a dry cloth