

! Attention: Please read the operating manual prior to operating the machine for the first time.



- 1 Salt level indicator light
- 2 "ON" indicator light
- 3 LED progress indicator lights
- 4 Start/Cancel Key
- 5 Half Load (1/2)
- 6 On/Off/Programme selection Key

How to use your dishwasher:

- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.
- Use the on / off / programme selection key to choose your washing program.
- Start the program with the Start/Cancel button:

Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the on / off / programme selection key to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.

Programme number	1	2	3	4	5
Programme name	Eco * Intensive	Clean&Shine	Quick&Shine	Mini 30	
Cleaning temperature	50 °C 70 °C 65 °C	60 °C 35 °C			
Degree of Soiling	Most economical washing programme for the medium soiled daily dishes that are kept waiting.	Suitable for heavily soiled dishes, pots and pans.	Daily washing programme for normally soiled dishes.	Daily washing programme for normally soiled dishes in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.
	Medium High Medium	Medium Medium Low			
Prewash	+	+	-	-	-
Wash	+	+	+	+	+
Dry	+	+	+	+	-
Duration (min)	192 124 90 58 30				
Water (l)	14 17,6 11,8 11,8 11,8				
Energy (kWh)	1,02 1,70 1,24 1,32 0,79				

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. * Reference programme for testing institutes. The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

