

instruction booklet

**Lambretta 150**

**INNOCENTI**

**SPECIAL**

**INNOCENTI** motor division

**INNOCENTI** motor division


*We are honoured and pleased to welcome you amongst the owners of a **Lambretta 150 Special** and appreciate your choice of our product.*

*The **Lambretta 150 Special** was designed and built in our works and has reached you after exacting checks and tests, thus ensuring the perfection and warranty of our product.*

*The life of your scooter depends very much on the care and maintenance you give it. We have here, briefly summarised some fundamental hints and instructions which we feel will help you in knowing and making the most of your new machine.*

*Remember we have created in this country and throughout the world a network of Authorized Lambretta Service Dealers, with trained personnel and fully equipped with tools and original spare parts to ensure the perfect functioning of your machine. Accept our advice and take advantage of their skill and expert knowledge at any time, bearing in mind that every member of this great Lambretta Organization is at your service.*

*We wish you « Bon voyage » and a wonderful time on your new **Lambretta 150 Special** designed for you, the connoisseur.*

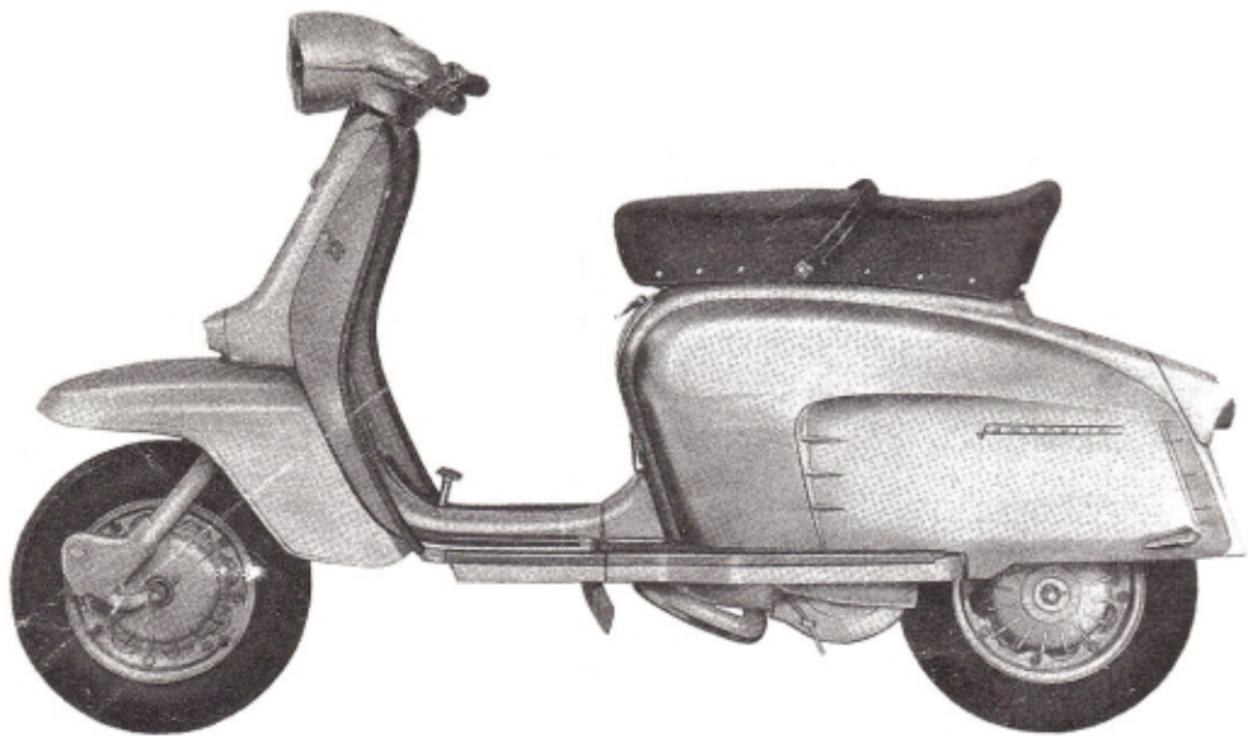

**Lambretta** 150 special

## IDENTIFICATION OF THE SCOOTER


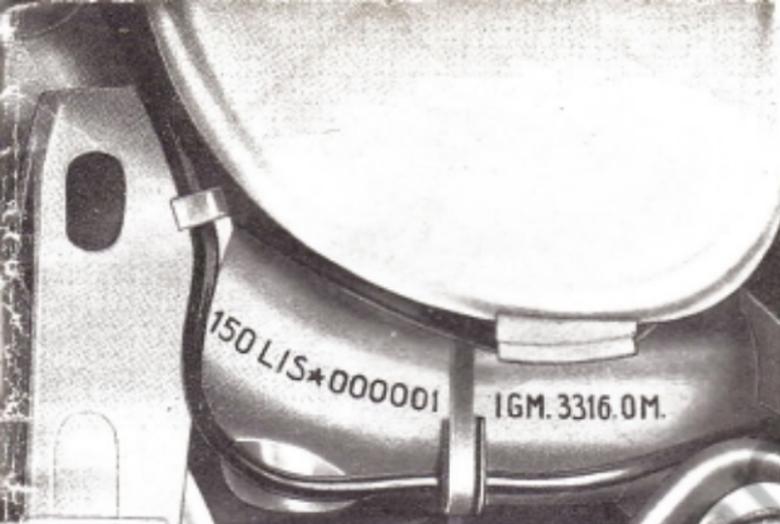


Fig. 1

Fig. 2

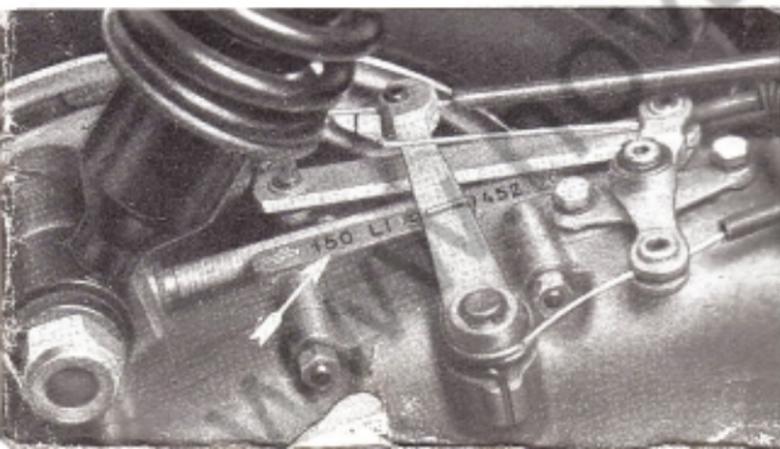

The frame and engine numbers, which serve to identify your scooter in accordance with the Rules and Regulations, are stamped as shown in figures 1 and 2. These numbers should always be quoted when requesting spare parts.

## KEYS

The sets of keys supplied with your scooter are for the main light switch in the centre of the handlebar facing the driver, see fig. 3, for the steering lock fitted under the left hand of the handlebar and for the luggage box situated in the central front rib of the frame (fig. 4). Each key has a number stamped on it and the same number is stamped on the lock or switch itself, so that in the case of loss, a replacement can be obtained by quoting the appropriate number.

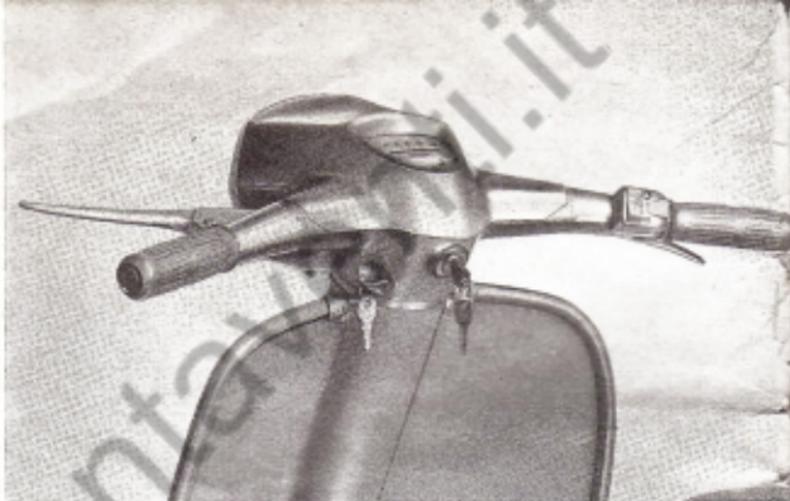


Fig. 3

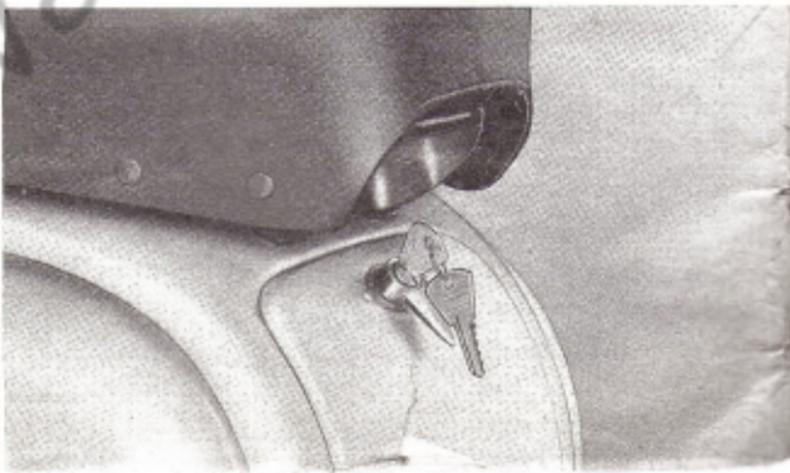


Fig. 4

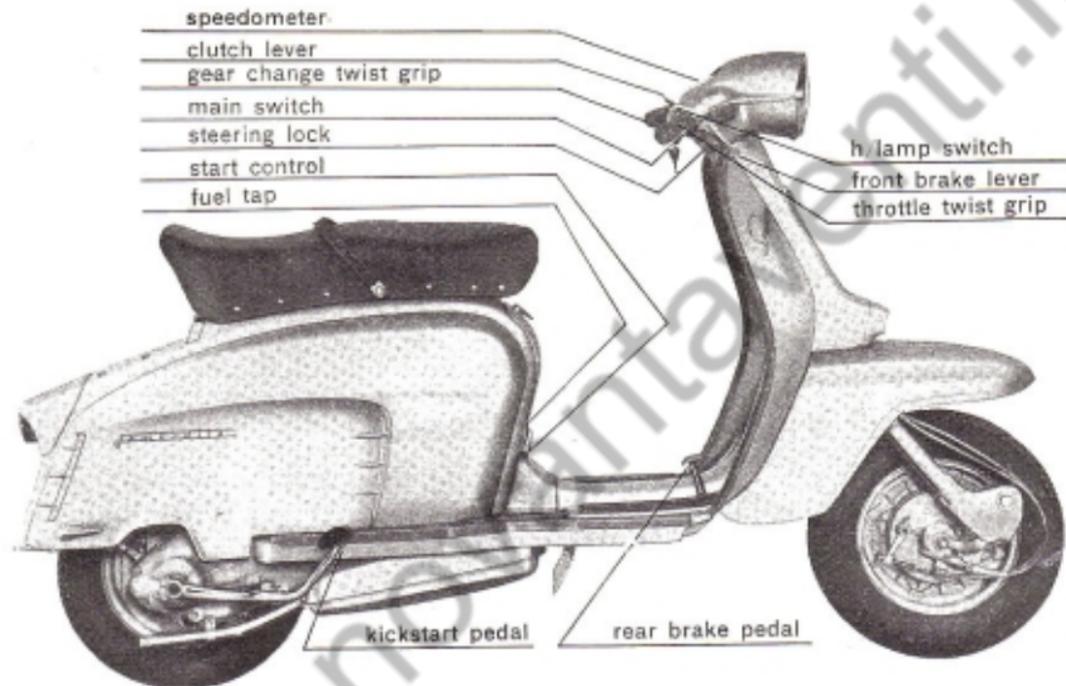


Fig. 5

## CONTROLS

Fig. 5. Shows the controls on your scooter. They are:

## **On the handlebar**

**Right hand:** front brake lever, throttle twist grip and headlamp beam switch with horn button.

**Left hand:** Clutch control lever and gear change control.

**Centre:** on top: speedometer and head-lamp; facing driver: main switch and steering lock.

The main switch key has 4 positions; clockwise:

- (key vertical) machine at standstill - lights out;
- day riding-lights out;
- night riding (in town) - pilot light, speedometer light and rear light on;
- night riding (in country areas) - headlamp, speedometer light and rear light on.

The headlamp beam switch, with horn button, is fitted near to the right hand twist grip. In the first position, the key can be extracted from main switch.

**Under left hand handlebar arm:** steering lock.

To use steering lock, turn handlebar full lock to either of left and then turn key half a turn.

## **On the footboard**

**Right hand side:** Rear brake pedal.

**On the central frame rib** under the front part of saddle

**On Left hand side:** 3-way fuel tap (open, reserve, closed) see fig. 6.

When machine is at stand-still, it is advisable to turn tap to closed position. The fuel tank contains a total of 1.9 galls. (8,5 Lt) of fuel. When riding, tap should be in open position, and when you have to switch to reserve you still have 1½ pints (0,8 Lt) available (in other words a further 20 miles approximately).

1. Closed

2. Open

3. Reserve

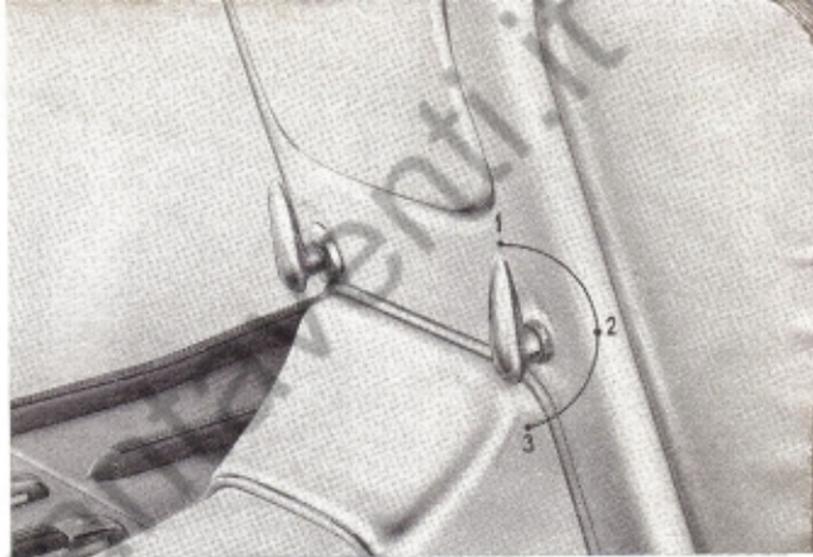


Fig. 6

**On Right hand side:** start control. Turn start control lever 180° clockwise (this only when starting on a cold engine). Return to original positions as soon as engine is running steadily.

### **On right hand side of machine**

Kickstart pedal. Before kick starting, ensure that gear is in neutral, insert key into main switch, turning it to day riding position.

## SERVICE INSTRUCTIONS

### During running-in period

(first 900 miles) keep strictly to the following rules:

- use a mixture of 4 % oil (1 part in 25) **BP Energol two stroke** and good standard petrol;
- do not exceed the following speeds:

|                | 1st gear | 2nd gear | 3rd gear | 4th gear |
|----------------|----------|----------|----------|----------|
| miles per hour | 12       | 19       | 24       | 34       |
| km/h           | 20       | 30       | 40       | 55       |

- do not maintain these speeds for long periods;
- do not climb hills on full throttle;
- do not accelerate at full throttle;
- take great care **not overheat** your engine;
- take great care to have your machine fully serviced, as per the service schedule, at the correct time, by one of the authorized service agents.

**Remember that the life of your scooter depends entirely on the running-in schedule being properly maintained.**

## Fuel - Fuel tank

After the running-in period, use mixture of 2% oil (1 part in 50) BP Energol two stroke.

To reach the fuel tank filler cap:  
— free the saddle hold by pressing on rear portion (see fig. 7);  
— lift saddle forward and open lid frame on rib (see fig. 8).

The tank contains a total of 1.9 galls (8,5 Lt) of which 1 1/2 pints (0,8 Lt) are reserve (for the fuel tap, see page 7).



Fig. 7

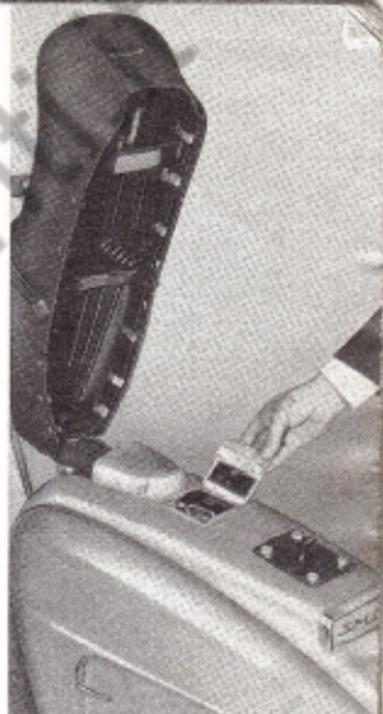


Fig. 8

## Wheels

Tires 3.5-10.

Pressure: front 12 lbs per sq. inch (0,9 kg/sq.cm); rear 18 lbs per sq. inch (1,25 kg/sq.cm) with rider only; rear 32 lbs per sq. inch (2,25 kg/sq.cm) with pillion rider.

Wheels are interchangeable.

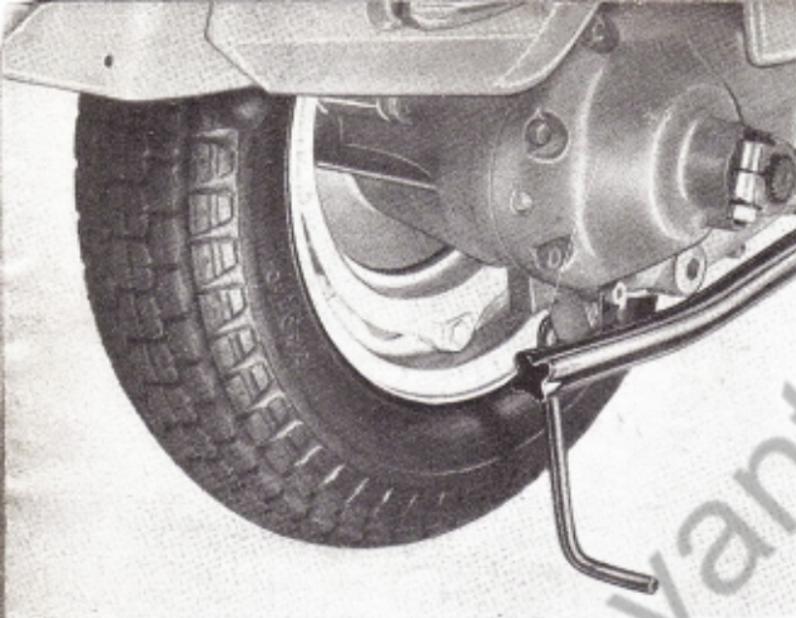


Fig. 9

To dismantle, lift machine on its stand. The necessary tools will be found in the luggage box (see page 14).

**To dismantle the front wheel:**

- unscrew the four dome nuts fixing rim to hub (care must be taken **not** to unscrew the other nuts);
- unscrew the two nuts holding hub to trailing links;
- slip wheel from links and hub, taking care not to pinch or bend the front brake and speedometer drive cables.

**To dismantle the rear wheel:**

- fit the wheel lift stand, supplied in kit, to the lug on crankcase (see fig. 9);
- unscrew the four dome nuts and slip wheel from hub.

**To dismantle tire from rims:**

- dismantle wheel (as above);
- ensure that tire is deflated;
- unscrew the four nuts holding the rims.

## Brakes

Ensure that the brakes are kept regularly adjusted so that the wheel is completely free to rotate, but the braking effect begins immediately the lever or pedal is used. Adjustment is carried out by means of two adjusters (see fig. 10 and 11).

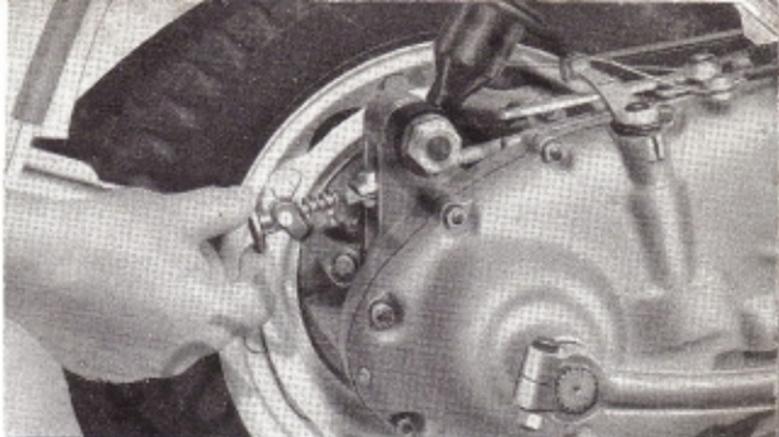


Fig. 10

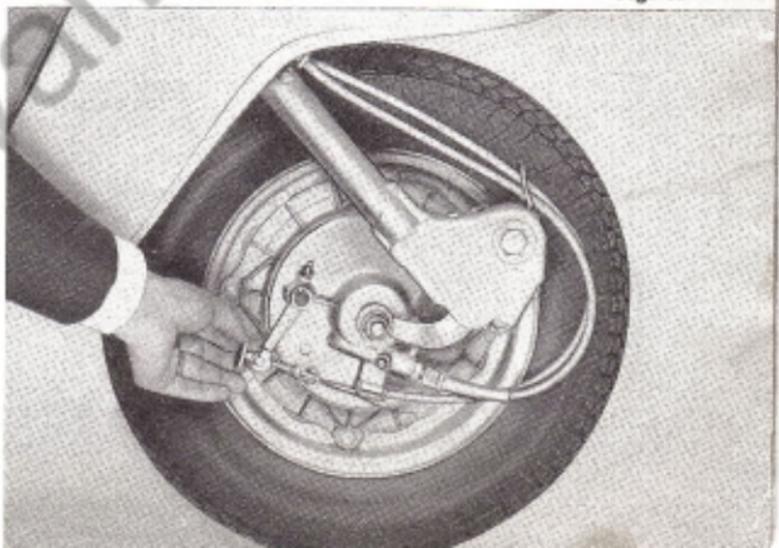


Fig. 11


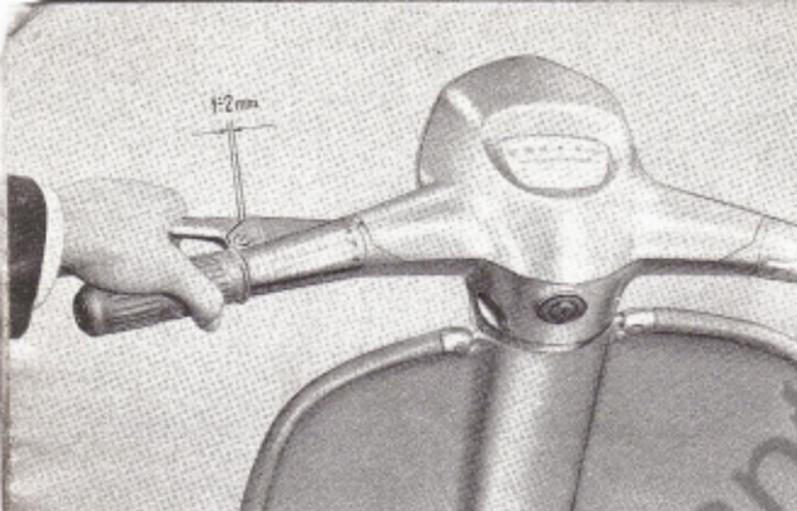


Fig. 12

Fig. 13

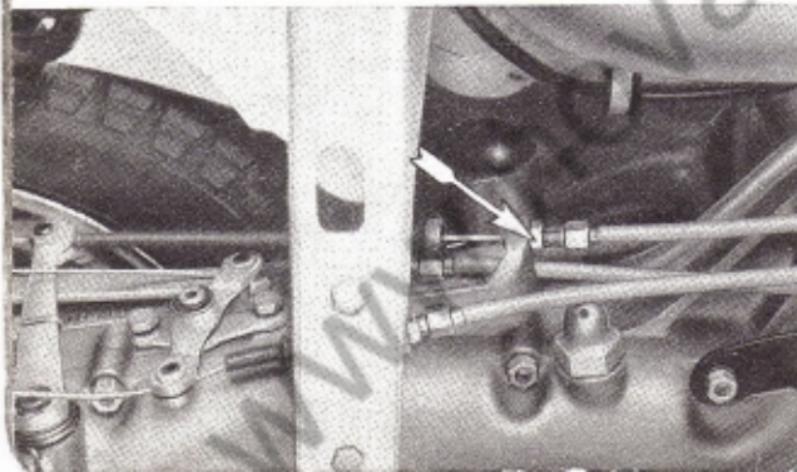

## Clutch

Keep the clutch constantly adjusted, so that it begins to slip when the clutch lever is in the position shown on fig. 12. The adjustment is carried out by turning the adjuster illustrated in fig. 13.

## Headlamp adjustment

Check tire pressures (see page 9).

Place a vertical screen as shown in fig. 14.

Put the scooter under the normal load conditions.

Loosen the V screw shown on the headlamp, rotating it until the upper edge of the zone illuminated by the dipped beam coincides with the horizontal line traced on the screen.

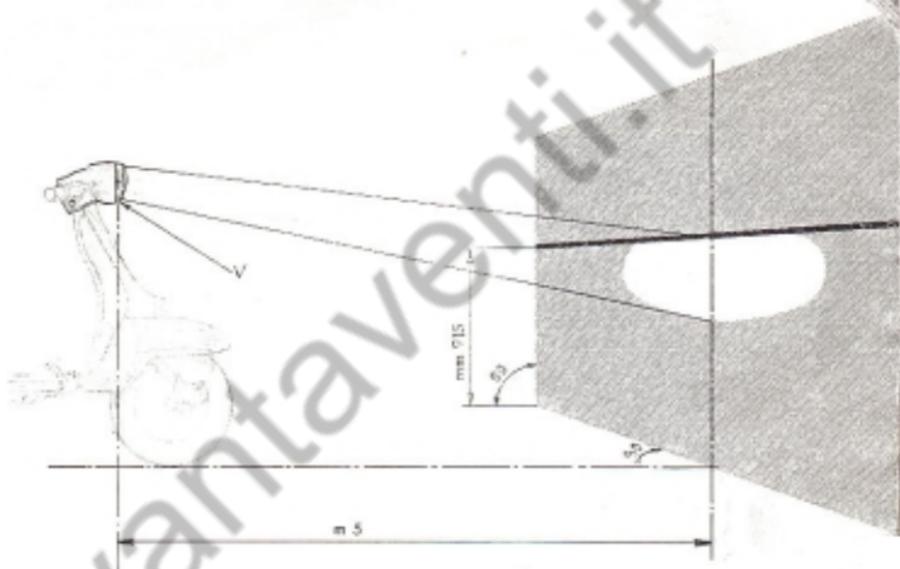


Fig. 14

## Luggage box and tools

The luggage box is moulded into the central frame rib under the front part of the dual seat. A pair of keys for this box are supplied with the scooter (see page 4). In the luggage

box, a tool kit is supplied consisting of:

- 1 double ended box spanner 21 - 14 mm for the spark plug and wheels nuts;
- 1 10 mm allen spanner for oil plugs;
- 1 spanner 14 - 27 mm for rear wheel nut;
- 1 double ended spanner 8 - 10 mm,
- 1 screwdriver;
- 1 rear wheel lifting stand;
- 1 points file;
- 1 4 mm allen spanner for trunion grub screws.

### **Starting - Running - Stopping**

#### **To start the scooter:**

- place on centre stand;
- ensure that gear is in neutral;
- insert key into main switch and turn to position of day riding (see page 6);
- open fuel tap (see page 6);
- turn starting control lever - **Only** when engine is cold (see page 7);
- keeping throttle to minimum, kick start machine;
- as soon as engine is turning over, give slight acceleration to warm up;
- if the starting control lever has been used, return to original position.

**To move off:**

- bring machine off its stand;
- with engine ticking over, pull clutch lever and put into 1st gear by rotating left twist grip;
- let clutch lever out slowly, accelerating engine gradually to maintain constant revolutions;
- continue to accelerate until you have reached the correct speed to change up to a higher gear.

**To change gear:**

- close throttle;
- pull clutch lever;
- insert next gear;
- let clutch lever out slowly, accelerating gradually at the same time;
- do not hesitate to change down, when wanting to appreciably reduce speed.

**To stop engine:**

- close throttle;
- pull clutch lever;
- put gear into neutral;
- cut out engine by turning main switch key to vertical position.

## PERIODIC MAINTENANCE

### Every 1250 miles (2000 km):

Brakes: check adjustment (see page 11).

Spark plug: check, clean electrodes with kit file and adjust gap to 0.020" (mm 0.5-0.6).

### Lubrication:

Crankcase: re-establish level with **oil BP Energol Gear Oil SAE 90**. To do this, unscrew oil level and filler plugs, pour in oil until this begins to flow from level plug (see fig. 17).

Clutch cable knuckles

Gear change cable knuckles, twin lever

Rear brake knuckles

Front brake knuckles

Front brake com pin

Rear brake cam pin

Handlebar control lever knuckles

Rear brake pedal pin

Lubricate with  
**BP Energol Gear Oil SAE 90**

Grease with  
**BP Energrease A1**

### Every 2500 miles (4000 km):

Clutch control: check adjustment (see page 12).

Flywheel magneto contact breaker points: clean and set gap 1/64" (mm 0.35-0.45): we suggest that adjustment of this part is carried out by Authorized Service Agent.

Flywheel magneto cam oil pad:  
lubricate.

Carburettor air filter: take out  
filter cartridge from air inlet box  
(see fig. 15-16), clean by shaking  
and blowing with low pressure air.

**Do not wash in petrol.**

We strongly recommend to re-  
change the filter cartridge every  
6.500 miles (km 10.000).

Decarbonise cylinder, cylinder  
head, piston head and silencer.

We strongly recommend that this work be carried out by an Authorized Service Agent.

## Lubrication

Crankcase: drain oil completely through drain plug (see fig. 17) when the engine is warm. Replace drain plug, unscrew filler and level plugs; pour in oil until this flows from level plug. Quantity of oil needed 1 $\frac{1}{4}$  pints of **BP Energol Gear Oil SAE 90**.



Fig. 15

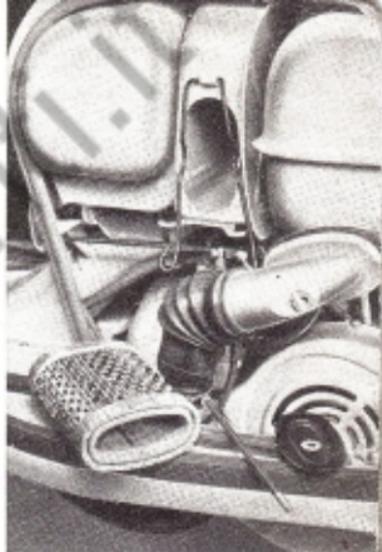


Fig. 16

Speedometer drive box: grease with gun through nipple (about 1 gr) **BP Energrease A1**.


Front wheel bearings: grease with gun through nipples **BP Energrease L3**.

Front suspension knuckles: grease with gun through nipples **BP Energrease A1**.

### Cleaning of scooter

- Wash engine with paraffin, using a brush. Dry with clean rags.
  - Wash cellulosed and plastic parts with water, using a sponge. Dry with chamoise leather.
- Do not use petrol or petroleum, otherwise damage will result.**

- When washing the bolt with water, protect the suction hose under the saddle in order to avoid water wetting suction box and filter cartridge.

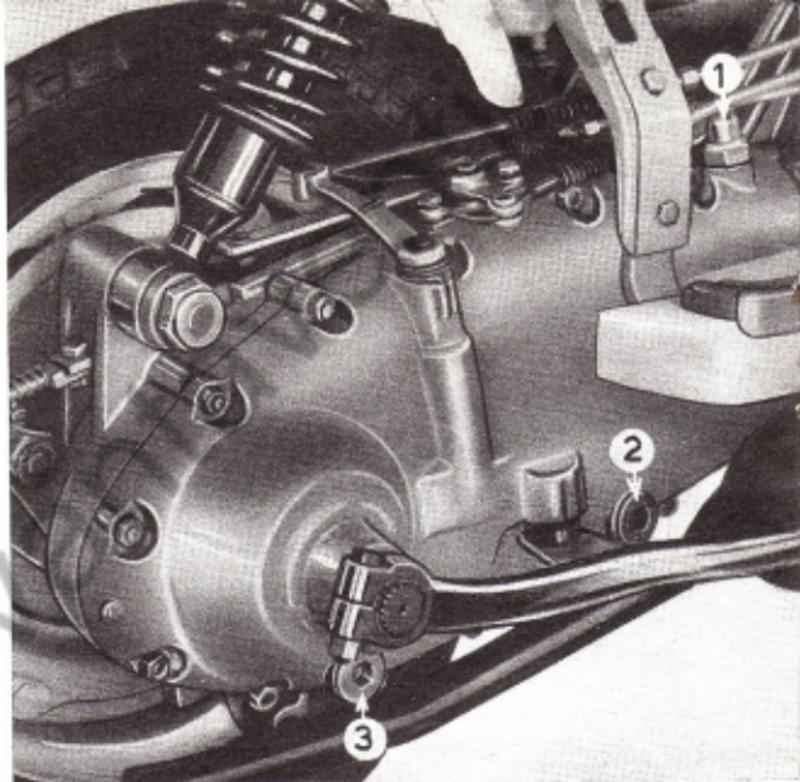


1 - oil filler plug 2 - oil level plug 3 - oil drain plug Fig. 17

# WIRING DIAGRAM




MAIN SWITCH

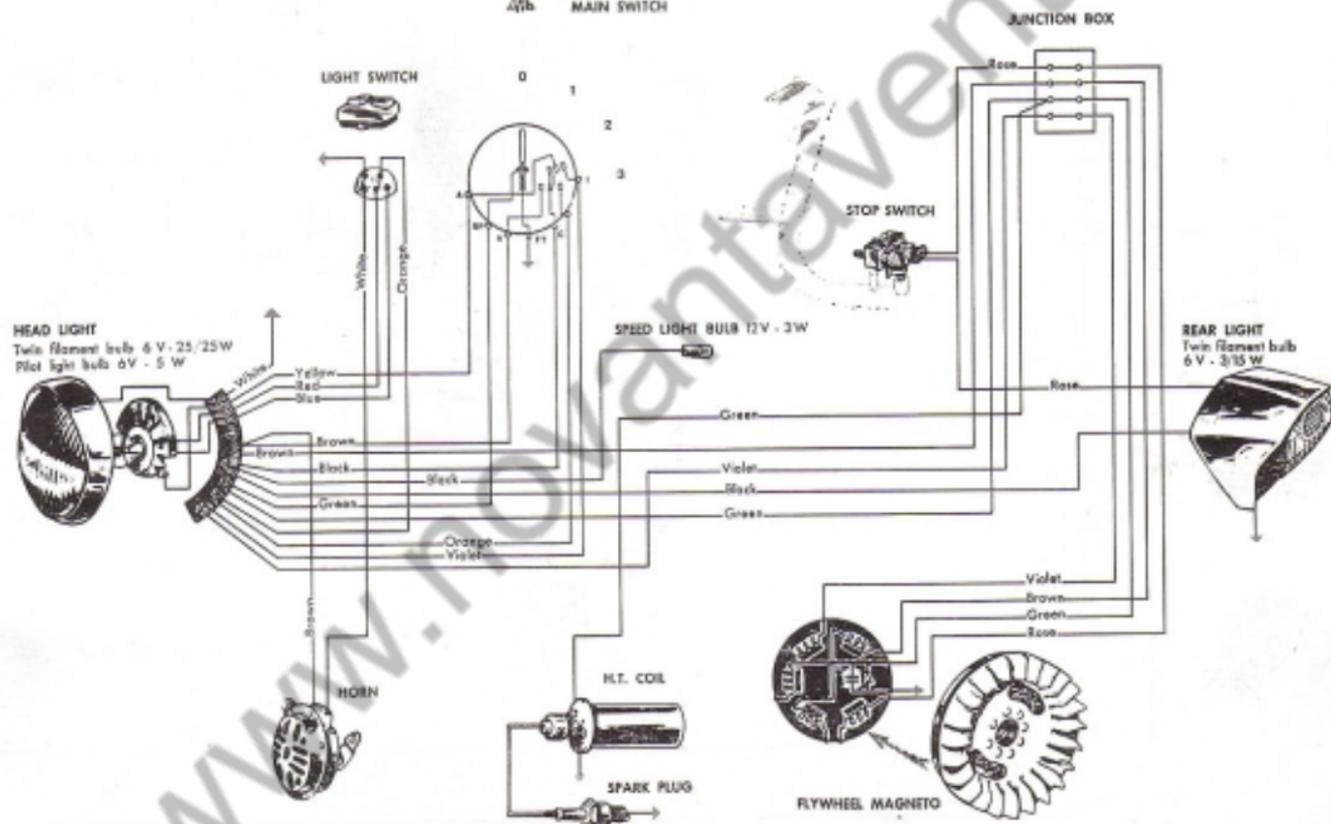

Every 2500 miles

Every 1250 miles

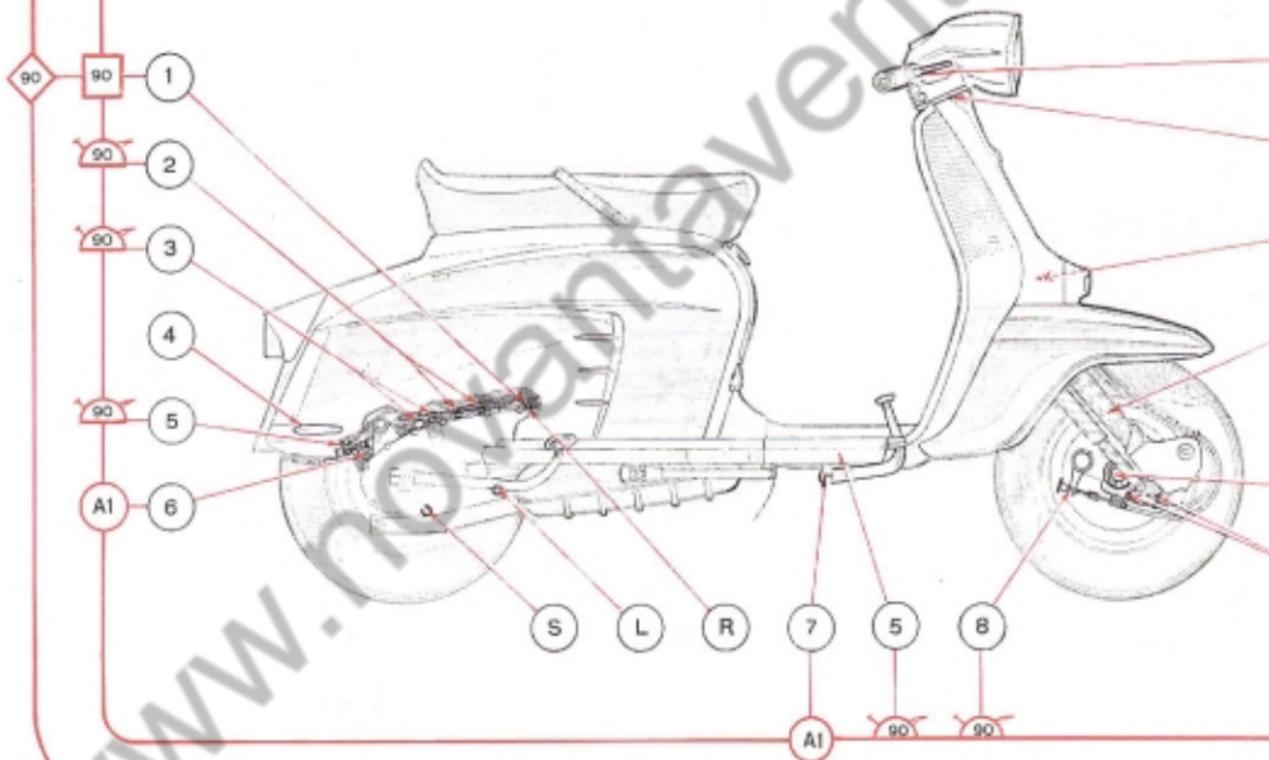

## LUBRICATION DIAGRAM

**PERIODIC LUBRICATION** - (1) Crankcase: change oil after first 900 miles (1500 km) using BP Energol Gear Oil SAE 90. (2) Gear change knuckles, twin lever. (3) Clutch and gear change knuckles. (5) Rear brake knuckles. (6) Rear brake cam pin. (7) Rear brake pedal pin. (8) Front brake knuckles. (9) Speedometer drive box. (10) Front wheel bearings. (11) Front brake cam pin. (15) Levers and controls on the handlebar: lubricate end cylinders of the clutch and brake cables, throttle and gear control drive box on knuckles.

### LUBRICATE THESE PARTS WHEN ASSEMBLING SCOOTER AFTER OVERHAUL

- Part (2), (3), (5), (8) should be lubricated with BP Energrease A1.
- Steering ball bearings, parts (13) (14) should be lubricated with BP Energrease L3.
- Side panel hooks (4) and handlebar control lever knuckles (15) should be lubricated with BP Energrease A1.
- Front suspension helical springs (12) should be smeared with BP Energrease A1.
- Introduce a little BP Energrease A1 in control cable coating before mounting wires.

90 means BP Energol Gear Oil SAE 90. A1 means BP Energrease A1. L3 means BP Energrease L3. R = oil filler plug. L = oil level plug. S = oil drain plug.



Grease




Oil



Re-establish level



Change oil

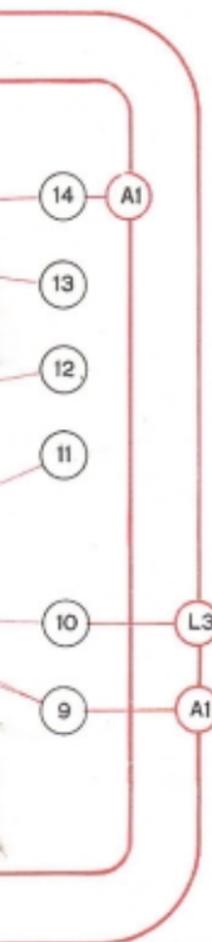

### **When the scooter remains out of use for some time:**

- wash and dry carefully as above;
- drain all petrol from tank and carburettor;
- clean tank and carburettor filters;
- unscrew spark plug, insert few drops of engine oil, rotate engine by hand two or three times to ensure a protective oil film in cylinder barrel. Replace spark plug;
- coat with anti-rust grease all non-painted parts;
- lift machine off the ground by placing blocks carefully under frame, tyres should not reach the floor;
- clean and deflate tyres;
- cover machine.

## **TROUBLE CHART A GUIDE TO ASSIST IN THE TRACING AND RECTIFYING COMMON FAULTS**

### **Engine fails to start, or stops immediately**

**Irregular flow of fuel to the carburettor**

**Flooded carburettor**

**Damaged carburettor float**

clean fuel lines and filters; clean out jet.  
close fuel tap, open throttle and endeavour  
to kick start. Or, unscrew and dry out spark  
plug, replace plug and kick start the motor.  
have it replaced at Service Agent.

## Ignition faults

(If current is reaching H.T. Lead)

- **dirty spark plug**
- **electrodes non adjusted or worn**
- **faulty spark plug**

(If current does not reach H.T. Lead)

- **contact breaker points faulty**
- **Flywheel magneto or H.T. coil circuits shorting**

unscrew and clean.  
adjust to 0.020" - 0.025" (0.5-0.6 mm).  
replace with a new one.

take machine to Authorized Service Agent.

take machine to Authorized Service Agent.

## Engine knocking

**Incorrect mixture**

draw out and replace with correct fuel mixture.

**Pre-ignition**

clean spark plug. Decarbonise cylinder head.

**Ignition too far advanced**

see Authorized Service Agent.

## Engine misfires

**Irregular flow of fuel to the carburettor**

**Spark plug electrodes gap too wide**

**Dirty spark plug**

**Contact points dirty or not adjusted**

check and clean out fuel passages.

re-adjust to correct gap.

unscrew and clean out.

clean and adjust gap between points.

## Explosion in carburettor

Pre-ignition due to excessive overheating of spark plug

change spark plug for one of a higher heat range.

Carbon deposits on spark plug

clean out spark plug.

## Loos of power or excessive overheating

Weak mixture

adjust by closing slightly the carburettor air screw.

Incorrect timing

adjust timing. Take machine to an Authorized Service Station.

Exhaust port or silencer partially obstructed

clean out port or silencer.

Cylinder head loose

tighten cylinder head nuts.

## MAIN FEATURES

|                            |                                  |           |
|----------------------------|----------------------------------|-----------|
| Overall length . . . . .   | 71"                              | (1800 mm) |
| Overall width . . . . .    | 27 <sup>1</sup> / <sub>2</sub> " | ( 700 mm) |
| Overall height . . . . .   | 40"                              | (1030 mm) |
| Ground clearance . . . . . | 6 <sup>1</sup> / <sub>2</sub> "  | ( 165 mm) |
| Wheel base . . . . .       | 51"                              | (1290 mm) |

Central frame in steel tube.

Bodywork in pressed steel sheet.

Front suspension by means of trailing links, carrying two helical springs.

Rear suspension, swinging engine unit with shock absorber carrying two helical springs.





## Electrical equipment

The electrical equipment is fed directly by the six-poles flywheel magneto with a rated power of 27 Watt.

The armature windings of the flywheel are made out of 5 coils: 3 of them are independent, 2 are connected in series, this according to the apparatus characteristics and utilization circuits concerned.

The 3 independent coils feed the ignition circuits (green), the city lights ones (violet), the stopping light ones (rose).

The 2 connected coils feed the warning horn circuits and the high and low beam circuits.

## Bulbs

| Position    | Use                           | No. | Characteristics |   |             |
|-------------|-------------------------------|-----|-----------------|---|-------------|
|             |                               |     | Electrical data | Bulb  | Socket      |
| Head lamp   | dazzle and anti-dazzle light  | 1   | 6 V - 25/25 W   | Spherical                                   | BA 20 d     |
| Head lamp   | pilot light                   | 1   | 6 V - 5 W       | Festoon<br>$\phi = 11$ mm<br>length = 39 mm | S 8,5/9,5   |
| Speedometer | speedometer light             | 1   | 12 V - 3 W      | Cylindrical                                 | BA 9 s      |
| Rear light  | number plate light/stop light | 1   | 6 V - 3/15 W    | Spherical                                   | BAY 15 d/19 |

[www.novantaventi.it](http://www.novantaventi.it)

foreign

**Lambretta**

organization

## EUROPA

### Europa Occidentale

**AUSTRIA** - DAS KLEINE AUTOHAUS Mueflner Hauptstrasse 33-36 - SALZBURG - telef. 4919.

**BELGIO-LUSSEMBURGO** - NECTO S.A. 45, Rue du Lac - BRUXELLES 5 - telef. 488434 - 488472.

**DANIMARCA** - VILH. NELLEMAN A/S Vestergade 55-67 - AARHUS - telef. 34100.

**FINLANDIA** - WIHURI YHTYNA OY AUTOLA Kaivokatu 10, P.O. Box 25 - HELSINKI - telef. 10351.

**FRANCIA-MONACO** - LAMBRETTA S.A.F.D. Soci t  Anonyme Francaise de Distribution, Rue Octave Mirbeau 37/39 - PARIS XVII - Telef. Galvani 6340.

**GERMANIA (Rep. Fed.)** - ZWEIRAD UNION Nopitschstrasse 70 - NUERNBERG - telef. 661321.

**INGHILTERRA-IRLANDA-GIBILTERRA** - LAMBRETTA CONCESSIONAIRES Ltd. Trojan Works, Purley Way - CROYDON, Surrey - telef. Municipal 2499.

**GRECIA** - AR. ZEIS S.A. Via Marni e 9 Averof Street - ATENE telef. 535123 - 535262.

**MALTA** - MIZZI BROTHERS Ltd. 283, Antonio Bosio Street MSIDA - telefono Sliema 1180-1724.

**NORVEGIA** - LAMBRETTA A/S Bygdoy All  60 - OSLO - telef. 563097.

**OLANDA** - J. LEONARD LANG'S Automobielbedrijven N.V., Stadhouderskade 114 E - AMSTERDAM - telef. 719744.

**PORTOGALLO** - U.T.I.C. - UNIAO DE TRANSPORTADORES PARA IMPORTA O E COMMERCIO Lda. Av. Infante D. Henrique Lote 11, Cabo Ruivo - LISBOA 6 - telef. 33171.

**SPAGNA** - LAMBRETTA LOCOMOCIONES S. A. Apartado 137 - EIBAR - telef. 73237.

**SVEZIA** - LAMBRETTA A. B. Nya Ullevi 24 - GOTEBORG - telef. 158300 - 158301 - 158331.

HALMSTAD BIL- OCH MOTOR A/B-HALMSTAD.

**SVIZZERA** - CILO S. A. - Rue du Petit Rocher 6 - LAUSANNE - telef. 021-247722.

**TURCHIA** - ARCELIK A. S. S t l ce, Karaa ac Caddesi N  2-4 - HALICIOGLU-ISTANBUL - telef. 49440.

### Europa Orientale

**ALBANIA** - MAKINAIMPORT - TIRANA

**CECOSLOVACCHIA** - MOTOKOV ENTREPRISE Tr. Dukelskych Hrdin  47 - PRAGA 7 - telef. 239240-9/325.

**GERMANIA (Rep. Dem.)** - DIA TRANSPORT MASCHINEN Mohrenstrasse 58 - BERLIN W. 8.

**POLONIA** - MOTOIMPORT - Ul. Nowy Swiat 11/13 - VARSAVIA - telef. 85071.

**ROMANIA** - TECHNOIMPORT Str. Doamnei, 5 - BUCAREST.

**RUSSIA** - AUTO EXPORT Smilenskaja p. 32/34 - MOSCA G-200 - telef. 442848.

**UNGHERIA** - MOGURT Postfach 249 - BUDAPEST 62 - telef. 228422.

## AFRICA

### Africa Mediterranea

**MAROCCHO** - FORGES DE BAZAS Rue de Bazas 31, P.O. Box 2094 - CASABLANCA - telef. 42523.

**ALGERIA** - LE STAND DE LA MOTO ET DU SCOOTER 54, Rue Rovigo - ALGER.

**EGITTO** - THE GENERAL ORGANIZATION FOR EXECUTING THE FIVE YEAR INDUSTRIAL PLAN, P.O.B. 1036, 6, Knalil Agha Street - GARDEN CITY (Cairo) .

**LIBIA** - GENERAL OVERSEAS LIBICA SPA, 251 Giaddat O. Muktar P.O.B. 306 - TRIPOLI - telef. 41958 - 42356.

**TUNISIA** - SOCIETE TUNISIENNE D'EXPANSION ECONOMIQUE ET INDUSTRIELLE S.T.E.E.I. 40, Rue Lavigerie - TUNIS - telef. 245486.

#### **Africa Occidentale**

**CAMEROUN** - MOTOCAM S.a.r.l., B.P. 5039 - R. C. 2543 - DOUALA - telef. 3294.

**CONGO** - SEDEC MOTORS, B.P. 1037 - LEOPOLDVILLE (Congo).

**COSTA D'AVORIO** - ETABLISSEMENT JEAN ABILE-GAL S. A. 13, av. Houdaille, B. P. 98 - ABIDJAN - telef. 35-65.

**DAHOMEY** - J. WALKDEN and C. Boîte Postale 24 - COTONOU.

**GABON** - S.C.I.G. Société Commerciale et Industrielle du Gabon, Boîte Postale 164 - LIBREVILLE.

**GHANA** - GHANA NATIONAL TRADING CORP., P. O. Box 1524 - ACCRA - telef. 64308.

**GUINEA REP.** - LES CYCLES DE GUINEE - B.P. 1139 - CONAKRY.

**GUINEA SPAGNOLA** - MARTINEZ HERMANOS Ltda. Avenida Rodriguez y Haya Apartado 42 - BATA.

**LIBERIA** - UNITED LIBERIA RUBBER - CORP. Randall Street, P.O. Box 51 - MONROVIA.

**MADEIRA** - LEACOCK AND c.ia Ltda. Caixa Postal 24 - FUNCHAL.

**SENEGAL** - MAUREL FRERES S.A. 3, Rue Descemet - DAKAR.

**NIGERIA** - LEVENTIS MOTORS Ltd. Private Mail Bag 1013 - EBUTE METTA/LAGOS - telef. 45011/12/13.

**SIERRA LEONE** - THE UNITED AFRICA COMPANY OF SIERRA LEONE Ltd. Motor Division, P.O. Box 418 - FREETOWN.

**TOGO** - THE UNITED AFRICA COMPANY Boîte Postale 3 54- LOME.

#### **Africa Orientale**

**ERITREA** - ETHIOSTOCK Ltd. Av. Itteghé Taitù 48-50, P.O. Box 1091 - ASMARA.

**KENIA, TANGANICA, UGANDA, ZANZIBAR** - F. BOEROND Co. (E.A.) Ltd. Consular House, Coronation Av., P.O. Box 30499 - NAIROBI - telef. 23886/87.

**SEYCHELLES ISLAND** - KIM KOON AND Co. Ltd. 493, Market Street, P.O. Box 36 - VICTORIA, MAHE.

**SOMALIA** - S.I.C.A. S.p.A. Casella Postale 23 - Mogadiscio - telef. 159.

**SOMALIA FRANCESE** - ANCIENS COMPTOIR RIES Boîte Postale 106 - DJIBOUTI.

**SUDAN** - ABDELMONEIM MOHAMED Cod. Ltd., P.O.B. 599 - KHARTOUM.

#### **Africa del Sud**

**ANGOLA** - TRAVASSOS & JORGE Ltda. Caixa Postal 464 - LUANDA.

**FEDER, RODESIA e NYSSALAND** - INCAR (PVT) Ltd. 44, Union Street - SALISBURY.

**MAURITIUS IS** - ADAM & CO. Ltd. 1, Queen Street - P.O.B. 53 - PORT LUIS.

**UNIONE SUD AFRICANA, AFRICA S. W., MOZAMBICO** - LAMBRETTA SALES (Pty) Ltd. - 206, Commissioner Street P.O.B. 7577 - JOHANNESBURG - t. 224768/234800.

#### **ASIA**

##### **Medio Oriente**

**ADEN** - PAUL RIES AND SONS (ADEN) Ltd. - Aden - telef. 3841-2-3.

**ARABIA SAUDITA** - SAMI KUTBI AND BROTHERS, P.O.B. 247 - JEDDAH - telef. 3039.

**BAHRAIN (Golfo Persico)** - AHMED SAYD HASHIM AL GHARABALLY, P.O. Box 191 - MANAMA - tel. 3852.

**CIPRO** - G. TH. PIERIDES ND SON Ltd. 42-44 Phaneromeni Street, P.O. Box 9 - NICOSIA - telef. 2834.

**GIORDANA** - TABARI ORGANIZATION P.O. Box 1540 - AMMAN.

**IRAN** - NEMAY Co. Ltd. Avenue Saadi, Passage Saadi - TEHERAN.

**ISRAELE** - VE-SRA ISRAEL VEHICLE TRADING Co. 25, Derech Petach Tikvah, P.O. Box 4659 - TEL AVIV - telef. 67667.

**KUWAIT** - BARRAK ABDULMOHSIN ALAQIL, P.O. Box 533 - KUWAIT - telef. 2824.

**LIBANO** - BRAHIM R. AUDI Boite Postale 316 - Rue Patriarche Hoyek 11 - BEYROUTH - telef. 230731.

**SIRIA** - ETABLISSEMENT ESTEFANE ET Cie. Rue 27 Mai - Boite Postale 415 - DAMAS - telef. 19524.

**TRUCIAL STATES** - GEEBEE TRADING COMPANY, P.O. Box 56 - DUBAI - telef. 9413.

#### Nord Asiatico

**CINA** - CHINA NATIONAL MACHINERY IMPORT AND EXPORT CORPORATION - Erh Li Kou, Hai Chiao - PEKING.

**COREA** - ITALIAN TRADING OFFICE Room. 508, Bando Building - SEOUL - telef. (2) 4263.

**FILIPPINE** - NATIONAL MERCHANDISING CORPORATION, P.O. Box 134 3111, Nagtahan St. - MANILA - t. 64576/7/8.

**FORMOSA** - YUE LOONG MOTOR COMPANY Ltd. 16, Sin Yang Street ? TAIPEI, TAIWAN - 10 CGRA - telefono 31434-31437.

**GIAPPONE** - BALCOM TRADING Co. Inc. Central P.O. Box 176 FUKOKU BUILDING No. 2-2. Uchisaiwai-cho - CHIYODA-KU, TOKYO - telef. 591-0945, 591-0946.

**HONG KONG-MACAO** - NATIONAL MOTORS 116, Waterloo Road - KOWLOON, HONG KONG - telef. 822331/32.

**OKINAWA** - OKINAWA LAMBRETTA MOTORS Co., Yamashiro Building 183-1 - YAFUSO, URASOE - telefono 0099.3203.

#### Penisola Indostana

**CEYLON** - COLONIAL MOTORS Ltd. 297, Union Place, P.O. Box 349 - COLOMBO - telef. 3342-3-4.

**INDIA, NEPAL, BUTHAN, GOA** - AUTOMOBILE PRODUCTS OF INDIA Ltd. Agra Road - BHANDUP-BOMBAY 78 - telef. 67481.

**PAKISTAN** - WAZIR ALI ENGINEERING Ltd. West Wharf, P.O. Box 5262 - KARACHI - telef. 33293-32036.

#### Sud-Est Asiatico

**CAMBODIA** - UNION COMMERCIALE INDOCHINOISE ET AFRICAINE, 25, M.V.P.B. Norodem - PHNOM-PENH. B.P. 236 - telef. 2087.

**INDONESIA** - N.V. BINA - 49 Djalan Raya Krekot Bunder - DJAKARTA.

**LAOS** - UNION COMMERCIALE INDOCHINOISE ET AFRICAINE - SAIGON - VIETNAM - telef. 5570.

**MALESIA, NORD-BORNEO** - BORNEO MOTORS (SINGAPORE) Ltd., 70, Orchard Road, P.O. Box 796 - SINGAPORE - telef. 27771.

**TAILANDIA** - BERLI, JUCKER AND Co. 11,36, New Road, P.O. Box 173 - BANGKOK - telef. 33921.

**VIETNAM** - VINACO S. A. 35, Rue Phu-Kiêt, B.P. 409 - SAIGON.

## OCEANIA

**AUSTRALIA-TASMANIA** - LAMBRETTA DISTRIBUTORS (PTY) Ltd. 59, William Street - SYDNEY - telef. FA 9041.

**NUOVA CALEDONIA** - SOCIÉTÉ DE ROUVRAY 11, Avenue Jean Jaurès - NOUMEA - telef. 2440.

**ISOLE CAROLINE** - YAP TRADING COMPANY - YAP.

**ISOLE MARIANNE** - CYCLE CENTER INC. P. O. Box 805 - AGANA (Guam).

**NUOVA GUINEA AUSTRALIANA** - PACIFIC PRODUCTION (RABAUL) Ltd., Band A. Building, Park Street - RABAUL.  
PACIFIC PRODUCTION Ltd. P. O. Box 25 - PORT MORESBY.

**NUOVA ZELANDA** - P. COUTTS AND COY Ltd. GREY LYNN, 164-170, Great North Road, C. P. O. Box 3471 - AUCKLAND W. 2 - telef. 14099.

**THAITI** - ETS. MARCEL LASSERRE, Avenue Georges Clémenceau, Boite Postale 487 - PAPEETE.

## Centro America

**BAHAMAS** - BAHAMA ENGINES Ltd., East Bay Street, P. O. Box 1658 - NASSAU 1 telef. 8636.

## AMERICA

### Nord - America

**ST. PIERRE-MIQUELON** - S.O.R.A.N.D. 1 B. SERIEUL - L. ANDRIEUX ET Cie. - SAINT PIERRE ET MIQUELON.

**U.S.A.-CANADA** - INNOCENTI CORPORATION LAMBRETTA DIVISION, 31-17, 38th Avenue - LONG ISLAND CITY, NEW YORK - telef. Empire 1-2455.

**BERMUDE** - THE BERMUDA MOTOR AND CYCLE ACC. Co. Ltd., The Lucas House - HAMILTON - tel. 1-3186/87.

**CUBA** - TRANSIMPORT, Apartado 6865 - Monserrate 261 - LA HABANA.

**EL SALVADOR** - FREUND S. A., Apartado Postal 82 - SAN SALVADOR - telef. 1100 e 7700.

**GIAMAICA** - G. B. ATTECK, 26, Halfway Tree Road Kingston 5 - telef. 6-7195.

**GUADALUPA** - SOCIÉTÉ ANONYME GARD, 18, Rue Frébault - POINTE DE COMPTOIRS BOREL ET GEA PITRE - telef. 156.

**HONDURAS** - SYRE, Apartado 107 - TEGUCIGALPA.

**PANAMA** - SPARTON S. A., P. O. Box 3415 - 26-109 Central Av. - PANAMA - telef. 5-1827.

**REPUBBLICA DOMINICANA** - HAÏTI - GUILLERMO A. RISK G., Emilio Prud - homme 4, P.O.B. 213 - SAN DOMINGO - telef. 2-5722.

**BARBADOS-GRENADA** - TRINIDAD-TOBACO - F. T. FARFAN AND SONS Ltd., 30, St. Vincent Street - PORT OF SPAIN - telef. 35990-31758.

### Sud - America (Nord)

**COLOMBIA** - AUTOTECNICA COLOMBIANA Ltda., Apartado Aereo 1066 - MEDELLIN - telef. 58-900.

**ECUADOR** - NEGOCIOS I REMATES UNION C.A. - N.E.R.U.C.A., Casilla N. 4594 - GUAYAQUIL.

**GUAYANA BRITANNICA** - THE AUTO SUPPLIES Co., 30, Hadfield and Lombar Streets, P.O. Box 1 and 50 - GEORGETOWN - telef. C 2406/7.

**GUAYANA FRANCESE** - COMPTOIR COMMERCIALE R. LIBRI, Rue L. Becker, P.B. 151 - CAYENNE - telef. 381.

**GUAYANA OLANDESE** - HANDELMAATSCHAPPJI I. FERNANDES AND SON N. Y. P.O. Box 1634 - PARAMARIBO - telef. 3445.

**PERU** - NIZZOLA and Co. - Cara - baya 801, Casilla 907 - Edificio Encarnacion - LIMA - telef. 72294.

**VENEZUELA** - SOCIEDAD INDUSTRIAL DE AUTOMOTORES Y ARTICULOS TROQUELADOS S. A., Av. L. da Vinci - Colinas de Bello Monte, Edificio Pigalle Of. 92, Apartado 6847 - CARACAS - telef. 724054-724235.

**Sud - America (Sud)**

**ARGENTINA** - SIAMBRETTA S. A., Molinedo 1600 - AVELLANEDA - BUENOS AIRES.

**BOLIVIA** - GINO CATELANI - YACUIBA.

**BRASILE** - LAMBRETTA DO BRASIL, Rua 24 de Maio 203 - 9º andar, Caixa Postal 6954 - SAN PAOLO - telefono 33-9181.

**CILE** - E.M.S.S.A., Avenida Buines 94, Casilla 13399 - SANTIAGO - telef. 82939.

**PARAGUAY** - GONZALEZ ODDONE, Esq. Caballero y Azara - ASUNCION - Casilla de correo 617 - telef. 6468-4326.

**URUGUAY** - SIAM TORQUATO DI TELLA S. A., Avenida Uruguay 1124 - MONTEVIDEO - telef. 89681-2-3-4.

## ITALIAN **Lambretta** ORGANIZATION

**AGRIGENTO** - Ditta SALVATORE CAPIZZI - Via Gioeni n. 135.

**ALBENGA** - Ditta PETRUCCI SPARTACO - Via Trieste - tel. 50-836.

**ANCONA** - Cav. ALBERTO BETTITONI - Via Giannelli, 1 - tel. 24-947.

**ANCONA** - Ditta MARIOTTI L. - Via C. Colombo, 104.

**AOSTA** - Ditta NALE MARIA & NALE ANGELO - Via Xavier de Maistre, 20 - tel. 21-13.

**AREZZO** - LUIGI AGNELLI - Via Garibaldi, 109 - tel. 25-24.

**ASCOLI PICENO** - « ASCO » ASCOLANA SCOOTER di Ferruccio Petracci - Via della Repubblica, 27 - tel. 35-77.

**ASTI** - Ditta F.lli TORELLO - Corso Dante, 56.

**AVELLINO** - GIUSEPPE IAPICCA - Via Circumvallazione - Palazzo Criscintini.

**AVEZZANO** - Ditta F.lli BIANCHI - Piazza Torlonia, 30.

**BARI** - L. SCOOTER S.n.C. - Via Piccinni, 193 - t. 10-828.

**BARLETTA (Bari)** - NUNZIO DI LEO - Via Carso, 4 - tel. 10-67.

**BASSANO DEL GRAPPA (Vicenza)** - BERTI SERGIO E MARIO - Via Verdi, 27 - tel. 23-532.

**BELLUNO** - BRANDASILE SILVANO - Via Feltre - t. 47-49.

**BENEVENTO** - VINCENZO PERRIELLO - Piazza Tribunale n. 2/3 - tel. 19-73.

**BERGAMO** - MASSIMO MASSERINI - Via A. Maj, 14 - tel. 37-325.

**BIELLA** - M.A.B. - Via Cottolengo, 24.

**BOLOGNA** - C.I.S.A. S.r.l. - Via Pietramellara, 27.

**BOLZANO** - S. A. MOTOR S.p.A. - Piazza Mazzini, 30.

**BORGOMANERO (Novara)** - SAVOINI GIUSEPPE & FIGLI - Corso Sempione, 35 - tel. 81-494.

**BRESCIA** - BRESCIA MOTORI di SALA & POLVEROSI - Via Luigi Apollonio, 17/A - tel. 50-051/2.

**BRINDISI** - OC.RA. - Via Appia, 21.

**BUSTO ARSIZIO** - MARIO MARA - Via Magenta, 48.

**CAGLIARI** - IN.CO.SA S.r.l. - Via Dante, 105 - tel. 49-42.

**CALTAGIRONE** - GIACOMO GATTUSO - Via Princ. Umberto, 147-149 - tel. 14-31.

**CALTANISSETTA** - ANTONIA COSENTINO IN MILITELLO - Corso Umberto, 127 - int. 30-41.

**CAMPOBASSO** - NICOLANTONIO MUCCIACCIA - Via Zurlo, 16/18 - tel. 24-109.

**CARPI (Modena)** - COMMISSIONARIA LAMBRETTA CARPI S.r.l. - Via Ciro Menotti, 2 - tel. 61-787.

**CARRARA** - BATTISTA PIERI - Via Roma, 36/B - t. 29-84.

**CASALE MONFERRATO (Alessandria)** - Ditta CURINO TERESIO - Via A. Sobrero, 11 - tel. 43-24.

**CASERTA** - MARIO MASULLO - Via Roma, 25-27-29.

**CASTELLAMMARE DI STABIA (Napoli)** - GARAGE OMNIA di F. INGENITO - Piazza Stazione Circumvesuviana - tel. 10-57.

**CATANIA** - S.V.A.M. di A. Messina & C. - Viale Vitt. Veneto, 189/195.

**CATANZARO** - S.C.A.M. di DE PAOLA e C. - Via A. De Gasperi - Palazzo CEM.

**CECINA (Livorno)** - LUIGI VENTURI - C.so Matteotti, 98 - tel. 73-030.

**CESENA (Forlì)** - Cav. ANTONIO GIACOMONI & F. S.n.c. - Via Battisti, 50 - tel. 21-352.

**CHIAVARI (Genova)** - BOGGIO DOMENICO - Piazza N.S. Dell'Orto, 8 - tel. 25-04.

**CIVITAVECCHIA (Roma)** - LAMBRETTA SPORT di Trumpy Ugo - Via Traiana, 41/43.

**COMO** - Reg. MARIO DE MARTINI - Via Napoleone, 4 - tel. 28.799.

**COSENZA** - GIOVANNI GALLO - Via Montesanto, 11.

**CREMONA** - LAMBRETTA CREMONA di MASI MARIO - Via Trento Trieste, 132/134 - tel. 29.492.

**CUNEO** - S.n.C. - AUTOCUNEO di GARRO GIUSEPPE - Via Statuto, 6.

**DARFO (Brescia)** - ANDREA ZOPPETTI - Via Marconi, 1f - tel. 34.

**DOMODOSSOLA (Novara)** - SBARDELLATI LUCIANO - Corso F.lli di Dio, 19 - tel. 22-52.

**ENNA** - LIBORIO BRUNO & C. - Piazza Neglia, 3 - t. 13-95.

**ERBA (Como)** - CARLO VALSECCHI - Via Milano, 2 - tel. 61-470.

**ESTE (Padova)** - VENDA EUGANEA - Depositi e Rappresentazione S.r.l. - Via S. Rocco, 22 - tel. 55-04.

**FAENZA (Ravenna)** - S.I.M.M.A. S.r.l. - P.zza Ponte Lamone.

**FERRARA** - Dr. GULINATI C. - Via Bologna, 138 - t. 82-184.

**FIRENZE** - Ditta SERGIO PRESENTI - Via Cimabue, 16 - tel. 63-349.

**FIRENZE** - GARAGE ZANIRATTI di FRANCO ZANIRATTI - Viale F.lli Rosselli, 55 - tel. 45-341.

**FOGGIA** - DAUNIA MOTORI - di ENZO ZAVATTA - Via Capozzi, 9/11/13.

**FOLIGNO (Perugia)** - PAOLO NEGRI - Corso Cavour, 16.

**FORLÌ** - FRATELLI BAGNOLI - Viale Vitt. Veneto, 31 - tel. 22-084.

**FORMIA (Latina)** - OFFICINA GARAGE TATTA - Via Vitruvio, 115 - tel. 21.041.

**FROSINONE** - FRATELLI CORVI - Via Mazzini, 34/B.

**GALLARATE (Varese)** - FRANCO NOSEDA - Via Cattaneo, 16/A - tel. 20-139.

**GENOVA** - S.r.l. VINELLI & C. - Piazza Dante, 59/61 r - tel. 561-473.

**GENOVA-SAMPIERDARENA** - PARODI & C. S.a.S. - Via F. Avio, 42/r.

**GROSSETO** - FARMA ARRETI & SALOMONI E. - Via Ximenes, 40.

**IMOLA (Bologna)** - CREMONINI ENZO - Via Emilia, 308 - tel. 32-62.

**IVREA (Torino)** - GUIDO ENRIELLO - Via D'Azeglio, 38 - tel. 41-81.

**LANCIANO (Chieti)** - LUIGI MERCADANTE - Corso Trento e Trieste, 98 - tel. 71-05.

**L'AQUILA** - CESARE FIAMMA - Corso Federico II, 25.

**LA SPEZIA** - S.n.C. COZZANI & ROSSI - Piazza Caduti della Libertà, 6.

**LATINA** - BODEMA S.r.l. - Corso della Repubblica, 110.

**LECCE** - VINCENZO TURCHIULI - V'a delle Anime, 8.

**LECCO (Como)** - SPREAFICO ROMANO - C.so C. Alberto, 14 - tel. 24-750.

**LIVORNO** - S.p.A. A.C.A.M. - P.zza D. Chiesa, 52/59 - tel. 34-601.

**LODI (Milano)** - GIORGIO ESPOSTI - Viale Milano, 47 - tel. 30-43.

**LUCCA** - GIOVANNI MEI di NELLO MEI & FIGLI S.n.C. - Via Castruccio Castracane, 162/B.

**LUGO (Ravenna)** - MUCCINELLI BRUNO - Via Baracca n. 59 - tel. 20-53.

**MANTOVA** - ALDO MINGHETTI - Via Princ. Amedeo 26-a - tel. 59-15.

**MASSA** - Ditta GIUSEPPE FRASSON - Via Palestro, 11.  
**MERANO (Bolzano)** - MARIO MOCHI - Via Carducci, 10/12 - tel. 26-330.  
**MESSINA** - ALESSI & MAUGERI S.r.l. - C.so Vitt. Emanuele, 49/50.  
**MESTRE** - AUTOLAMBRO - S.a.S. di A. FORNARO & C. - C.so del Popolo, 7.  
**MILANO** - LAMBRO MOTORI S.p.A. - V.le F. Testi ang. via Masaniello, 89 - SESTO S. GIOVANNI (Milano) telefono 24-79-660 - 24-79-674.  
**MILANO** - MILANO SCOOTER S.r.l. - Via Paullo, 11 - tel. 580-670.  
**MODENA** - MOTORICAMBI BARBIERI - Viale Trento Trieste, 31/A.  
**MONDOVI' (Cuneo)** - AIRALDI STEFANO - Via Cottolengo, 14.  
**MONFALCONE (Gorizia)** - MARIO PERIN - V.le S. Marco, 76  
**MONZA (Milano)** - GHEFER & C. S.N.C. - Via C. Alberto, 22 - tel. 20-30.  
**NAPOLI** - ITALMOTOR di GUIDO BORTOLETTO - Piazza Nazionale, 95 - tel. 351-325.  
**NAPOLI** - SALVATORE SCONAMIGLIO - Piazza Vittoria n. 6 B.  
**NUORO** - RONDONI GIACOMO - P.zza Vitt. Emanuele, 5 - tel. 23-24.  
**ODERZO (Treviso)** - F.lli SCARDELLATO S.A.S. - Via Garibaldi, 6-12 - tel. 72-100.  
**ORTONA (Chieti)** - Ditta MARINOZZI & PIERMATTEO - Piazza Vittoria, 12 - tel. 72-568.  
**ORVIETO** - F.lli STORTI - P.zza Repubblica, 16 - tel. 31-38.  
**PADOVA** - GIAMPIETRO TUROLLA - V.le Navigazione Interna, 5 - tel. 27.104.  
**PALERMO** - CO.RI. S.r.l. - Via Antonio Salinas, 44/54 - tel. 247-083.  
**PAOLA (Cosenza)** - CALOMINO CUSTODIO - Via S. Rocco - tel. 28.

**PARMA** - CARLO PRADA - Via Petrarca, 1 - tel. 27-227.  
**PAVIA** - MOTOAUTO di SACCHI & VISMARA S.a.S. - Via Gilardelli, 2.  
**PERUGIA** - ARTURO TAGLIAMONTE - Via Cacciatori delle Alpi, 16.  
**PESARO** - DEL MONTE PAOLO - Viale Marsala, 11/13.  
**PESCARA** - RADAR di VITTORIO LUCIANI - Corso Vitt. Emanuele, 221 - tel. 22-625.  
**PIACENZA** - MOTORAUTO S.n.c. di BERGONZI & C. - Via Roma, 21.  
**PISA** - LIVIO DEL SEPPIA & C. - Via C. Cattaneo, 1 - tel. 23-025.  
**PISTOIA** - EMPORIO DELL'AUTO - C.so Vitt. Emanuele, 23 - tel. 25-44.  
**PONTREMOLI** - PINOTTI LINO - Via del Seminario.  
**PORDENONE (Udine)** - MOTOTECNICA - C. Garibaldi, 42 - tel. 23-22.  
**PORTO SAN GIORGIO (Ascoli Piceno)** - PETRACCI FER- RUCCIO - Corso Garibaldi, 235/241.  
**POTENZA** - F.lli SANTANGELO - Via Vaccaro, 12/14 - tel. 15-12.  
**RAGUSA** - C.A.I. - Via Archimede.  
**RAVENNA** - DITTA DE STEFANI - di DE STEFANI STEL- VIO - Via Guidone, 25-27-29.  
**REGGIO CALABRIA** - CARLO MAZZONE - Via S. Caterina, 16 - 16/A.  
**REGGIO EMILIA** - S.C.I.A.M. dei Fratelli GRISENDI - Via E. San Pietro, 55 - tel. 22-676.  
**RIETI** - ANGELETTI AGOSTINO - Via Battistini, 1/c.  
**RIMINI** - ADRIATICA SCOOTERS di Ing. F. CAVARA & G. VETTORI - P.zza 3 Martiri, 45 - tel. 22-879.  
**ROMA** - S.A.R.M.A. S.r.l. - Via S. Nicolò da Tolentino, 5 - tel. 471-251.

**ROVEVRETO** - EMILIO MANICA - Via Dante, 43/45.

**ROVIGO** - MOTOR CAMBI POLESANA di SIGOLO RINO - Via Amendola, 20 - tel. 49-09 - Via Piacenza, 12 - tel. 12-23.

**SALERNO** - GUIDO IANNONE

**SALO' (Brescia)** - GIANLORENZO SCURI - Via Calsona, 12.

**SAN MARINO** - A. RIGHI - BORGO MAGGIORE - Piazza del Mercato, 129 - tel. 163.

**SANREMO (Imperia)** - Ditta individuale - LUIGI BRUZZONE - Corso O. Raimondo, 89 - tel. 85-477.

**SASSARI** - IN.CO.SA. - Via dei Mille, 11/c - tel. 22-156.

**SAVONA** - CICLI PORASSO - Corso Italia, 19-21 - telefono 21-926.

**SIENA** - SIENA SCOOTER di L. e T. VANNOCCI - Via Vittorico Manuele, 46/48.

**SIRACUSA** - VINCENZO D'AMICO URSO - Via S. M. dei Miracoli, 39 - tel. 19-58.

**SONDRIO** - OTTORINO RUFFINI - Via Trento, 6-c - telefono 29-65.

**SPOLETO (Perugia)** - Ditta RUGGERO CORVELLI - Via Flaminia, 24 - tel. 42-43.

**SULMONA (L'Aquila)** - ALBERTO SACCHETTA - Via Occidentale, 111 - tel. 21-73.

**TARANTO** - JONIO MOTORI S.r.l. - Via Pupino, 13 c.

**TERAMO** - F.lli DI BONAVENTURA - Via Vezzola, 6.

**TERNI** - GIUSEPPE BELLÌ - Via Lungonera, 53 - tel. 29-191.

**TIVOLI (Roma)** - BRUNO PACIFICI - Viale P. Tomel, 21 - tel. 30-32.

**TORINO** - S.p.A. AUTO TORINO - Corso Principe Eugenio, 11 - tel. 553-484.

**TORTONA (Alessandria)** - ROLANDI RICCARDO - Via Emilia, 422 - tel. 81-567.

**TRAPANI** - Ditta FONTANA PAOLO - Via G. B. Fardella, 207.

**TRENTO** - M.A.S. - Moto Auto Servizi - Corso degli Alpini, 21.

**TREVIGLIO (Bergamo)** - O.R.V.A.M. - Viale C. Porta, 8.

**TREVISO** - S.G.A.M. di A. COMIRATO - Via S. Nicolò n. 11/13 - tel. 27-121.

**TRIESTE** - FILOTECNICA GIULIANA S.r.l. - Via Imbriani, 16 - tel. 36-613.

**UDINE** - NELLO BRINIS & C. - Via Pascolle, 43 - telefono 27-07.

**UDINE** - AUTOSCOOTER di OTTONE PIUSSI - Via Gorgi, 5.

**VARESE** - C. F. BUZIO - Via Orrigoni, 2 - tel. 23-973.

**VASTO (Chieti)** - SAVERIO BACCALA' - Corso Garibaldi, 123 - tel. 126.

**VENEZIA-MESTRE** - GIAMPIETRO TUROLLA - Corso del Popolo, 3.

**VERBANIA** - S.n.c. VERBANIA MOTOR - Via De Bonis, 11.

**VERCELLI** - Ditta E. TAVANTI - Via Parini, 1.

**VERONA** - SO.VE.MO. - Volto Cittadella, 18 - tel. 34.580.

**VERONA** - S.R.A.M. - Via Nizza, 1 - tel. 38.383.

**VIAREGGIO (Lucca)** - L'AUTOMOTO s.r.l. - Via Antonio Fratti, 312 - tel. 44-512.

**VIBO VALENTIA (Catanzaro)** - ANTONIO ZOCCALI - Via Luigi Razza, 30.

**VICENZA** - LEONE CHIARELLO - Porta Padova, 82 - telefono 23-846.

**VIGEVANO (Pavia)** - ABELE CERASTICO - Via Risorgimento, 6.

**VILLA POTENZA (Macerata)** - GIUSEPPE TRUBBIANI & FIGLIO.

**VITERBO** - Ditta FERRI ANSELMO - Via Orologio Vecchio, 22/24 - tel. 26-40.

## CONTENTS

|                               |      |    |
|-------------------------------|------|----|
| <b>Identification</b>         | Page | 3  |
| <b>Keys</b>                   | »    | 4  |
| <b>Controls</b>               | »    | 5  |
| <b>Service Instructions</b>   |      |    |
| During running-in period      | »    | 8  |
| Fuel - Fuel tank              | »    | 9  |
| Wheels                        | »    | 9  |
| Brakes                        | »    | 11 |
| Clutch                        | »    | 12 |
| Headlamp adjustment           | »    | 13 |
| Luggage box and tools         | »    | 13 |
| Starting - running - stopping | »    | 14 |
| <b>Periodic maintenance</b>   |      |    |
| Every 1.250 miles (2000 km)   | »    | 16 |
| Every 2.500 miles (4000 km)   | »    | 16 |
| Cleaning of scooter           | »    | 18 |

|  |             |              |
|--|-------------|--------------|
| <b>Wiring Diagram</b> . . . . .  | <b>Page</b> | <b>19</b>    |
| <b>Lubrication diagram</b> . . . . .   | <b>»</b>    | <b>20-21</b> |
| When the scooter remains out of use for sometime . . . . .                                 | <b>»</b>    | <b>22</b>    |
| <b>Trouble chart - A guide to assist in tracing and rectifying common faults</b> . . . . . | <b>»</b>    | <b>22</b>    |
| <b>Main Features</b> . . . . .   | <b>»</b>    | <b>24</b>    |
| <b>Bulbs</b> . . . . .   | <b>»</b>    | <b>27</b>    |
| <b>Lambretta Organisation</b> . . . . .  | <b>»</b>    | <b>29</b>    |

[www.scooterhelp.com](http://www.scooterhelp.com)

**INNOCENTI**

SOC. GENERALE PER L'INDUSTRIA METALLURGICA E MECCANICA

MILANO ROMA NEW YORK PARIGI LONDRA CARACAS DÜSSELDORF